



Helix Spinner

Small

1. Slide the edge rod into the sail pocket and insert into ferrule.

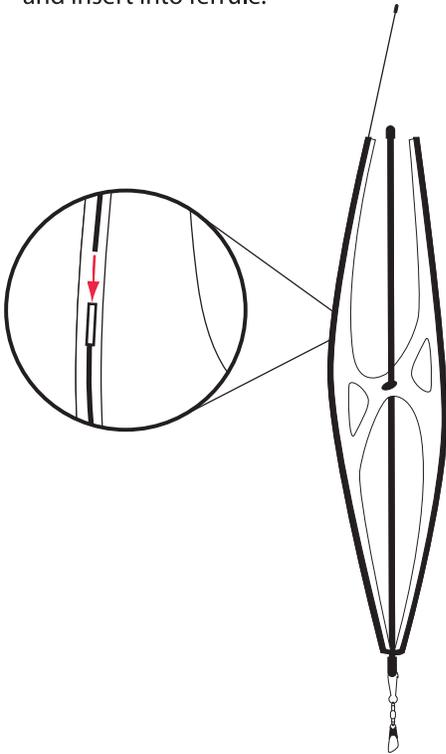


2. Slide the spar fully into the sail pocket and place tension cord into nock.

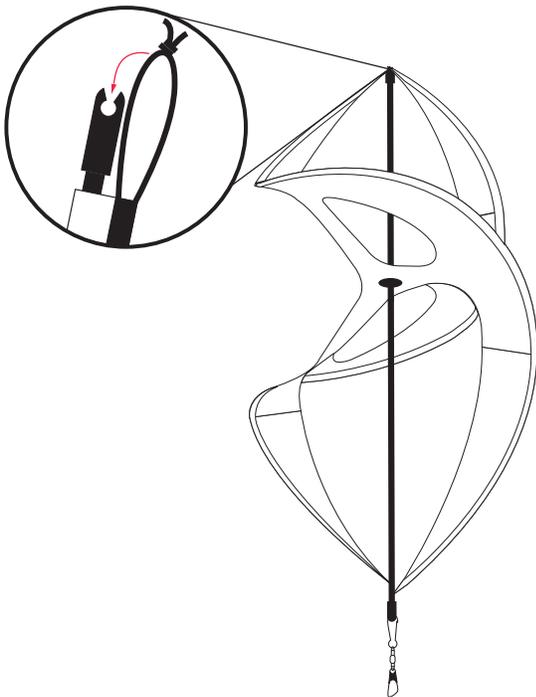


3. Repeat on other edge.
4. Replace and lubricate swivel as needed.

Large

1. Slide the edge rod into the sail pocket and insert into ferrule.

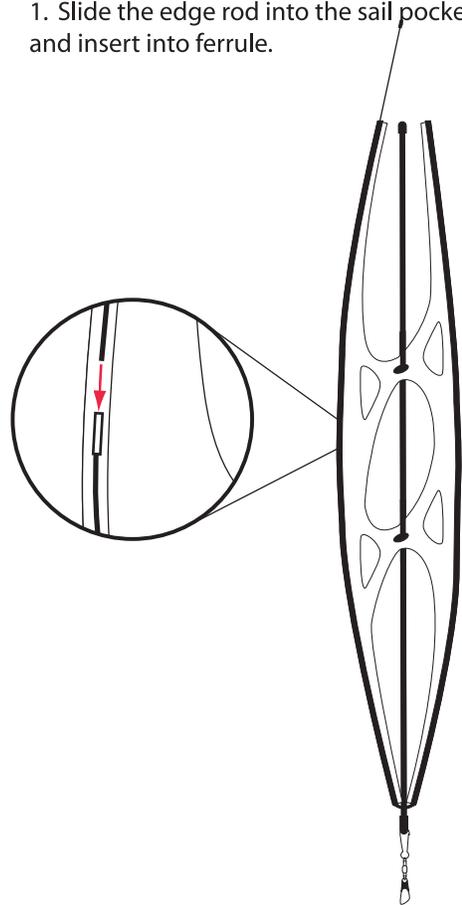

2. Slide the spar fully into the sail pocket and place tension cord into nock.

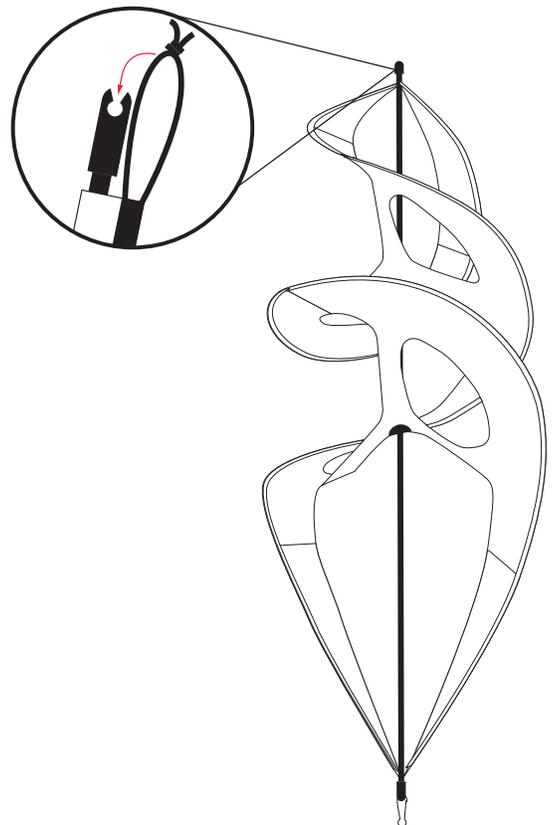

3. Repeat on other edge.
4. Replace and lubricate swivel as needed.