



1. Before assembling the **Spreader**, make sure that the (2) white stabilizing lines are not tangled as well as the black bungee in the center.

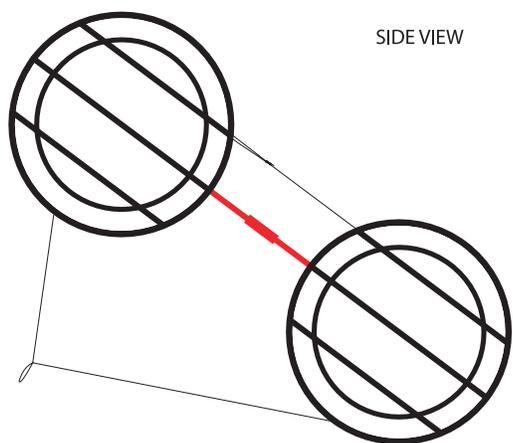

2. Insert the rod without the **Ferrule**, into the rod with the **Ferrule** to complete the **Spreader**.

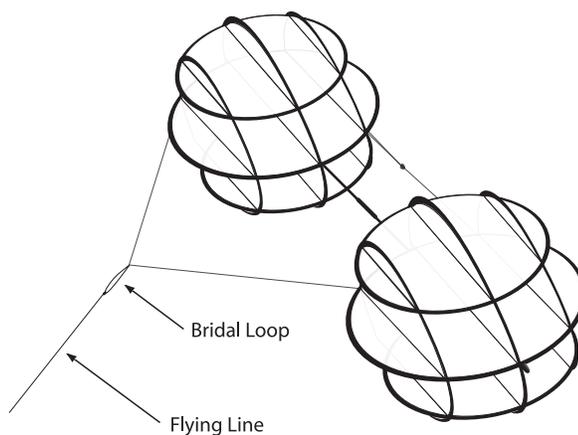

3. Attach **Flying Line** to the **Bridle Loop**.