



Mini Turtle Kite

_____ x 2


1. Unroll the kite and place face down on a flat surface. Check that the main spar is securely inserted into its pockets.

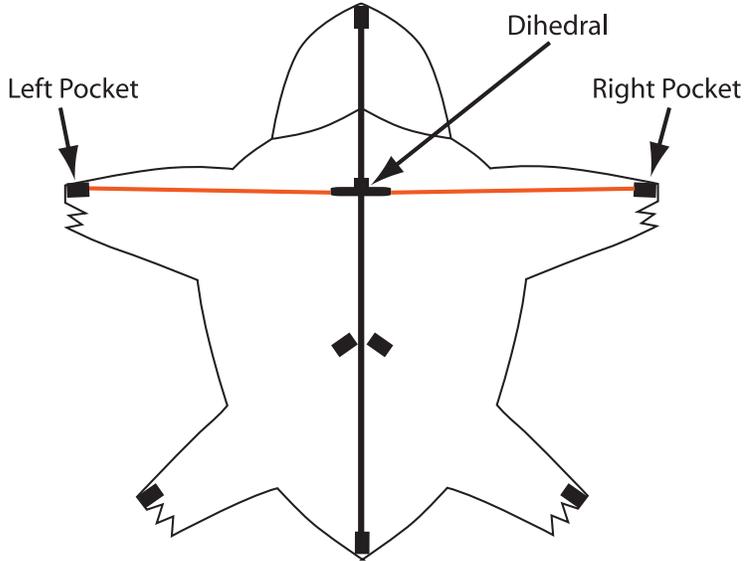

2. Insert a spar into the center dihedral connector and then into the pocket of the corresponding side. Repeat for the other side. Make sure that the dihedral is turned so the wings on the kite are swept away from the bridle

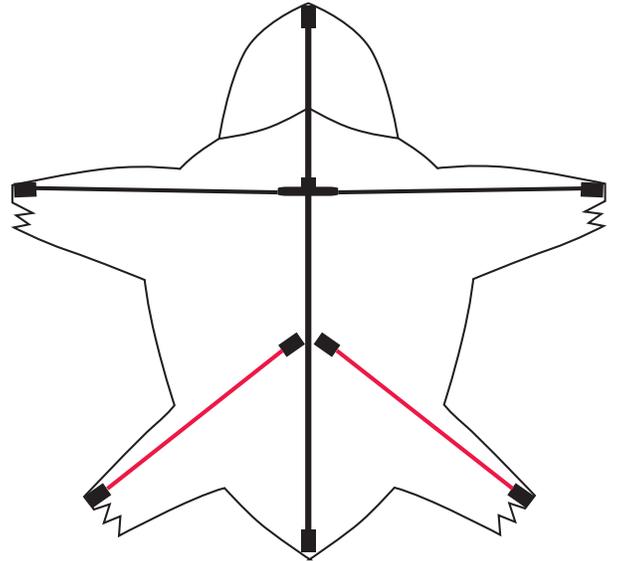

3. Insert the tail spar into the tail pockets in the seam.

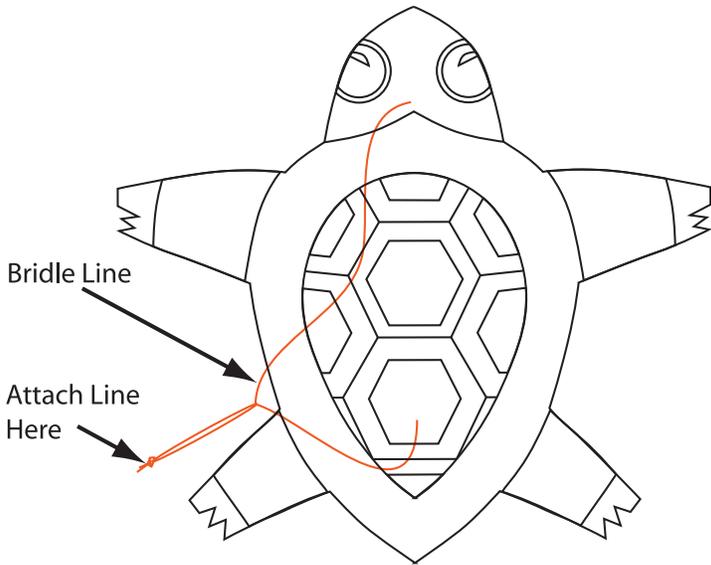

4. Finally, turn the kite over and attach line to bridle and fly!

