




Sting Ray Kite




1. Unroll the kite and place face down on a flat surface. Check that the main spar is securely inserted into its pockets.

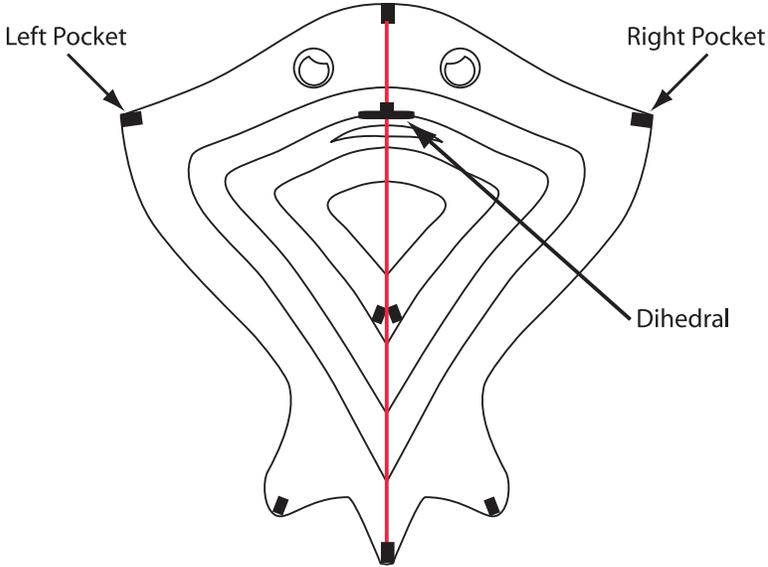

2. Insert a spar into the center dihedral connector and then into the pocket of the corresponding side. Repeat for the other side. Make sure that the dihedral is turned so the wings on the kite are swept away from the bridle.

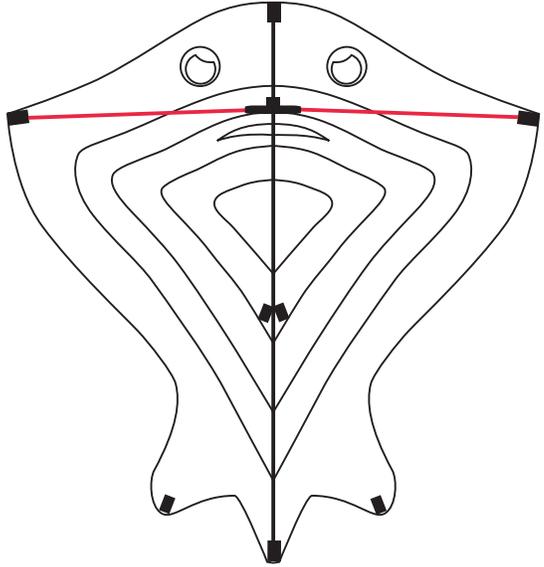

3. Insert the tail spars into the tail pockets.

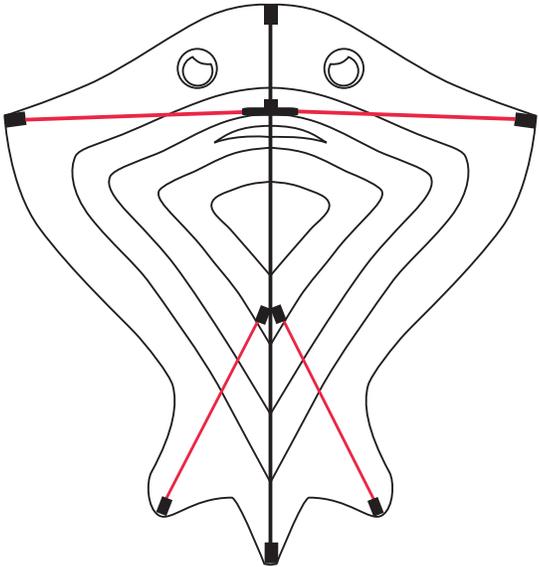

4. Attach line to bridle and fly!

